


Box: PLOCK 1

| | | | |
|-------|--|----------|-------------------------------------|
| BIKE | HONDA VFR 800 V-TEC | PART NO. | EHA - 78 |
| YEAR | 2002 - ON | FIT KITS | OVAL Z039.11040 // ROUND Z039.10040 |
| NOTES | Where not supplied use original fittings | FEATURES | DB KILLER Z038.10120 |

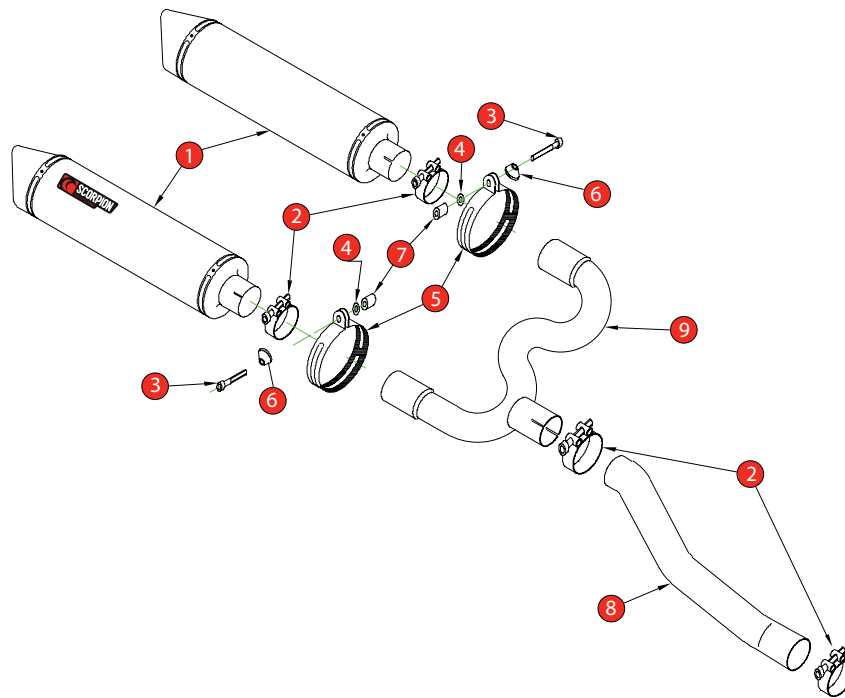

| | | | |
|---|---|---|------------------------|
| 1 | 2 x 350mm Silencers ESC 55 | 8 | Connecting pipe CP 121 |
| 2 | 4 x 51 x 55mm Band Clamps (Z016.10002) | 9 | Connecting pipe CP 122 |
| 3 | 2 x M8 x 90mm Cap Head Bolts (Z017.10085) | | |
| 4 | 2 x M8 x 25mm Washers (Z017.10825) | | |
| 5 | 2 x Composite Straps (R-Z038.10090)(O-Z038.10088) | | |
| 6 | 2 x Aluminium Bolt Finishers (Z026.20068) | | |
| 7 | 2 x 25mm Aluminium Spacers (Z026.10007) | | |

| | |
|--------------|-----------------|
| E-MARK ROUND | SCDB-RS e4 2035 |
| E-MARK OVAL | SCDB-OS e4 2072 |
| ISSUE NO. | 6 |
| DATE | 19/08/08 |
| AUTHORISED | S.Northrop |
| CHECKED | |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.