Box: PLOCK 1

BIKE	SUZUKI RMZ 450	PART NO.	DSSI - 74
YEAR	2008 - 2010	FIT KITS	OVAL Z039.11362
NOTES		FEATURES	DB KILLER Z038.10038

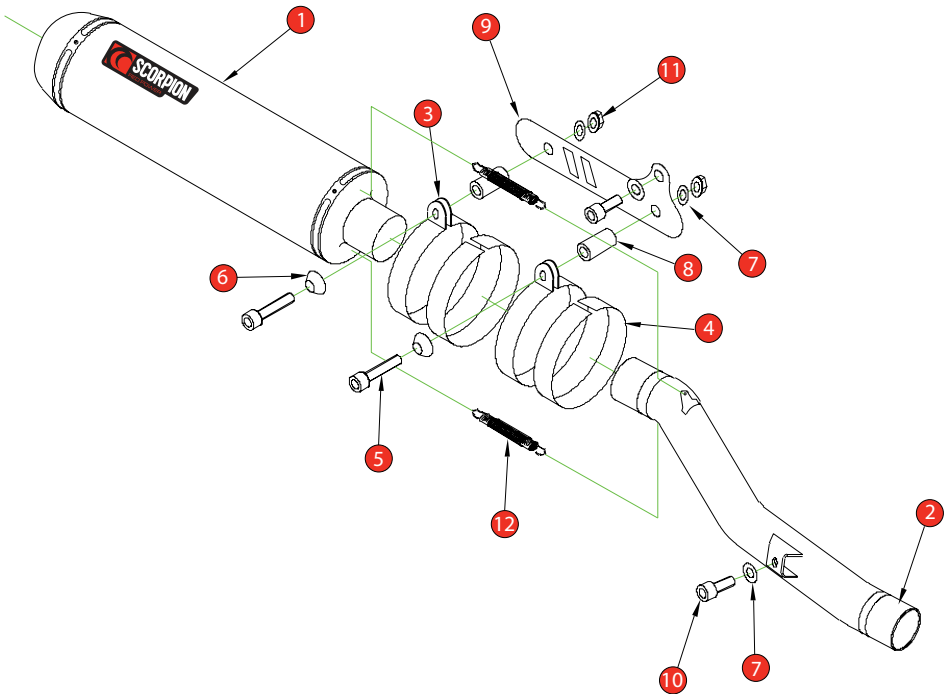

1	400mm Silencer SC 134
2	Connecting Pipe CP 556
3	2 x Brushed Silencer Straps (Z028.10255)
4	2 x Silencer Strap Rubbers (Z029.10022)
5	2 x M8 x 55mm Cap Head Bolts (Z017.10079)
6	2 x Alloy Bolt Finishers (Z026.20068)
7	4 x M8 x 17mm Washers (Z017.10062)
8	2 x 30mm Aluminium Spacers (Z026.10008)
9	Silencer Mounting Bracket (Z015.10045)
10	2 x M8 x 20mm Cap Head Bolts (Z017.10072)
11	2 x M8 Nyloc Nuts (Z017.10062)
12	2 x Rubber Sleeved Springs (Z028.10030)
13	Photo Fitting Instructions

E-MARK ROUND	
E-MARK OVAL	
ISSUE NO.	0
DATE	05/10/09
AUTHORISED	S.Northrop
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

B

C

D

A) Remove side panel and remove the O.E silencer and connecting pipe, taking care not to lose any of the original fittings.

B) Slip on the connecting pipe and finger tighten the M8 bolt into frame.

C) Slip on the Scorpion silencer and pull springs with pliers to fit into spring hoops.

D) Fit the silencer bracket around Scorpion silencer and bolt to frame. Then fasten up can strap with retaining bolt.

Fitting instructions follow on next page .

SCORPION RED POWER

Box: PLOCK 1

BIKE	SUZUKI RMZ 450	PART NO.	DSSI - 74
YEAR	2008 - 2010	FIT KITS	OVAL Z039.11362
NOTES		FEATURES	DB KILLER Z038.10038

CONTINUED FROM OVERLEAF:

E

E) Ensure all components are fitted correctly, then tighten up all the loose nuts and bolts. When happy everything is tight you can now replace your side panels and attach Scorpion badge to silencer.

When the 5 steps above hae been completed double check all nuts and bolts are tight and that all original functions are not impaired. When satisfied fitment is correct take your bike out for a short run to ensure system is sealed correctly and there are no gas leaks. After a short run, allow time for the exhaust and bike to cool, then check all the nuts and bolts are tight.